



40G700

Illustrated Parts List

Model Series

40G700

TYPE NUMBERS
0100 through 0400.

TABLE OF CONTENTS

Air Cleaner	6
Alternators	8
Blower Housing	6
Camshaft	4
Carburetor	5
Controls	7
Crankshaft	3
Cylinder	2
Cylinder Head	4
Electric Starter	7
Engine Sump	2
Exhaust System	7
Fuel Supply	5
Flywheel	7
Gasket Set-Carburetor	5
Gasket Set-Engine	5
Gasket Set-Valve	4
Governor Spring	7
Ignition	8
Intake Manifold	4
Kit-Carburetor Overhaul	5
Lubrication	3
Pistons, Rings, Connecting Rod	3
Valves	4




PRINTED IN U.S.A.

BRIGGS & STRATTON



COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.


40G700

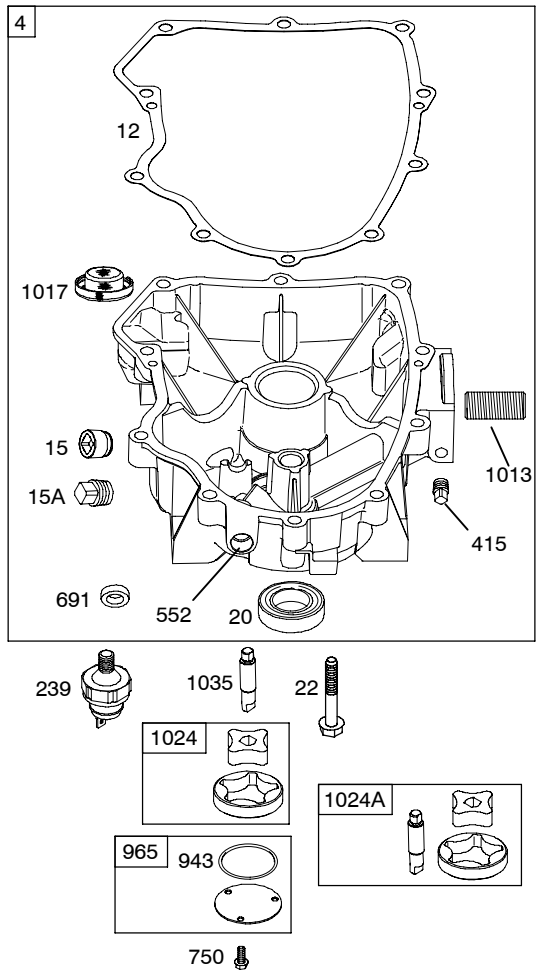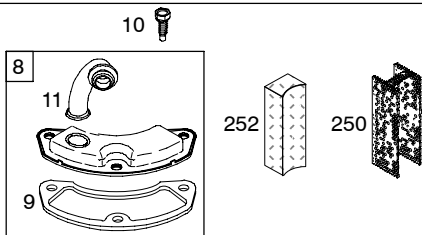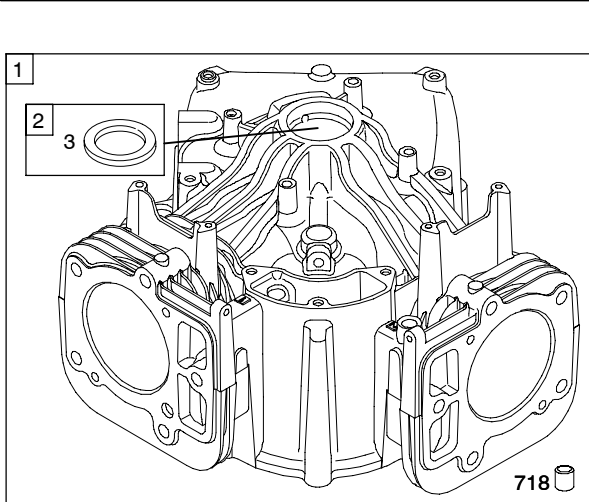

REQUIRED when replacing parts with warning labels affixed.



1330 REPAIR MANUAL






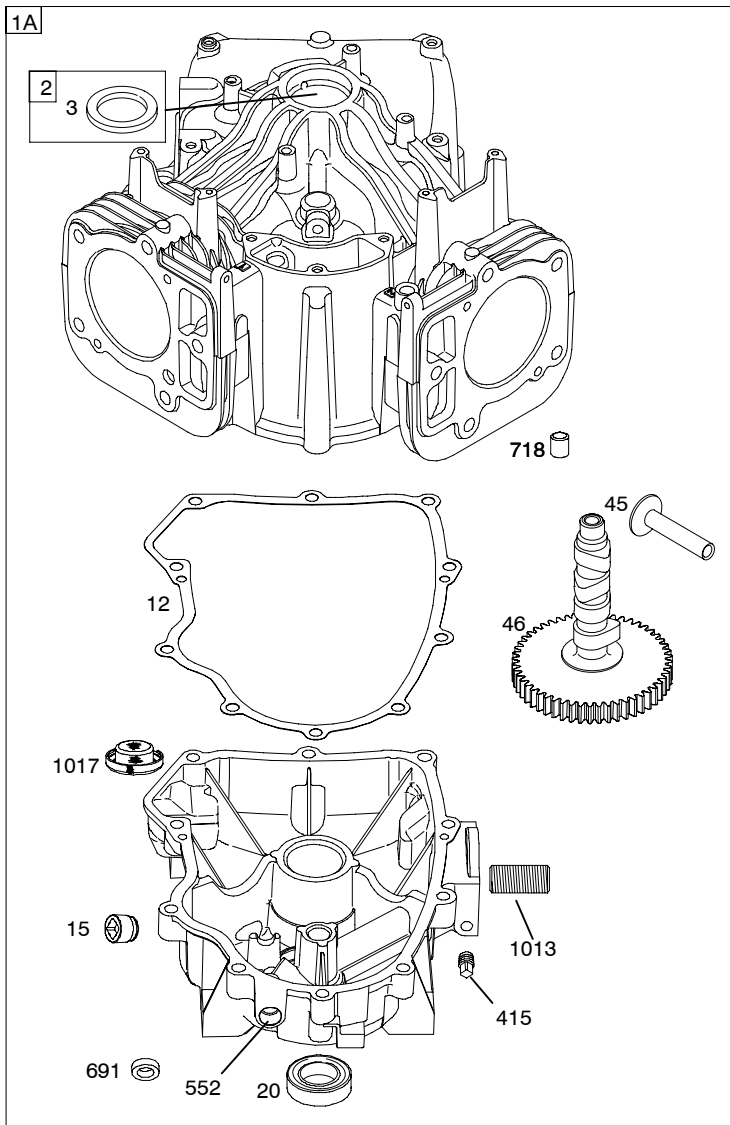


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.


5193-2

Assemblies include all parts shown in frames.

05/17/2007

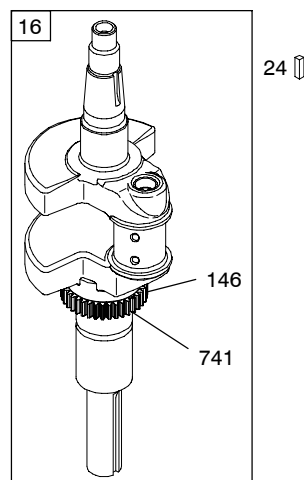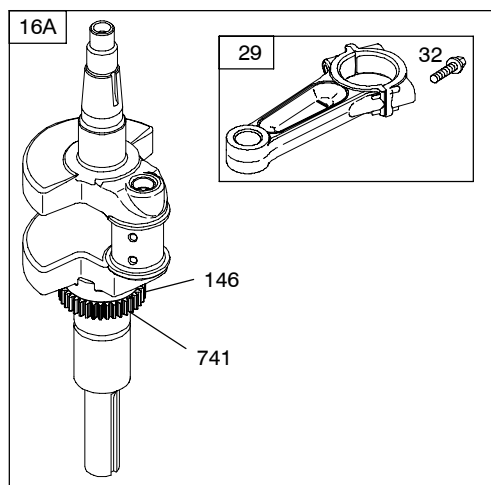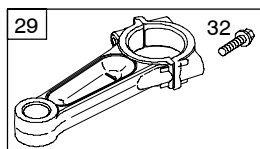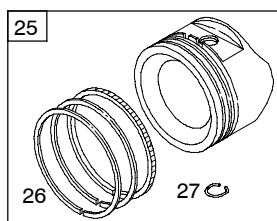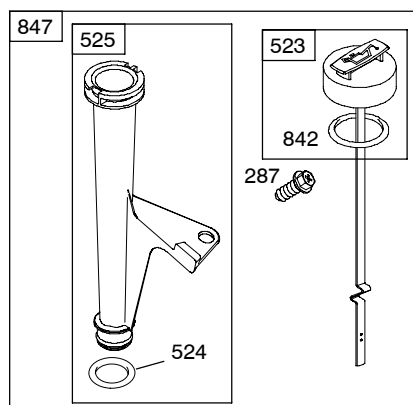

40G700





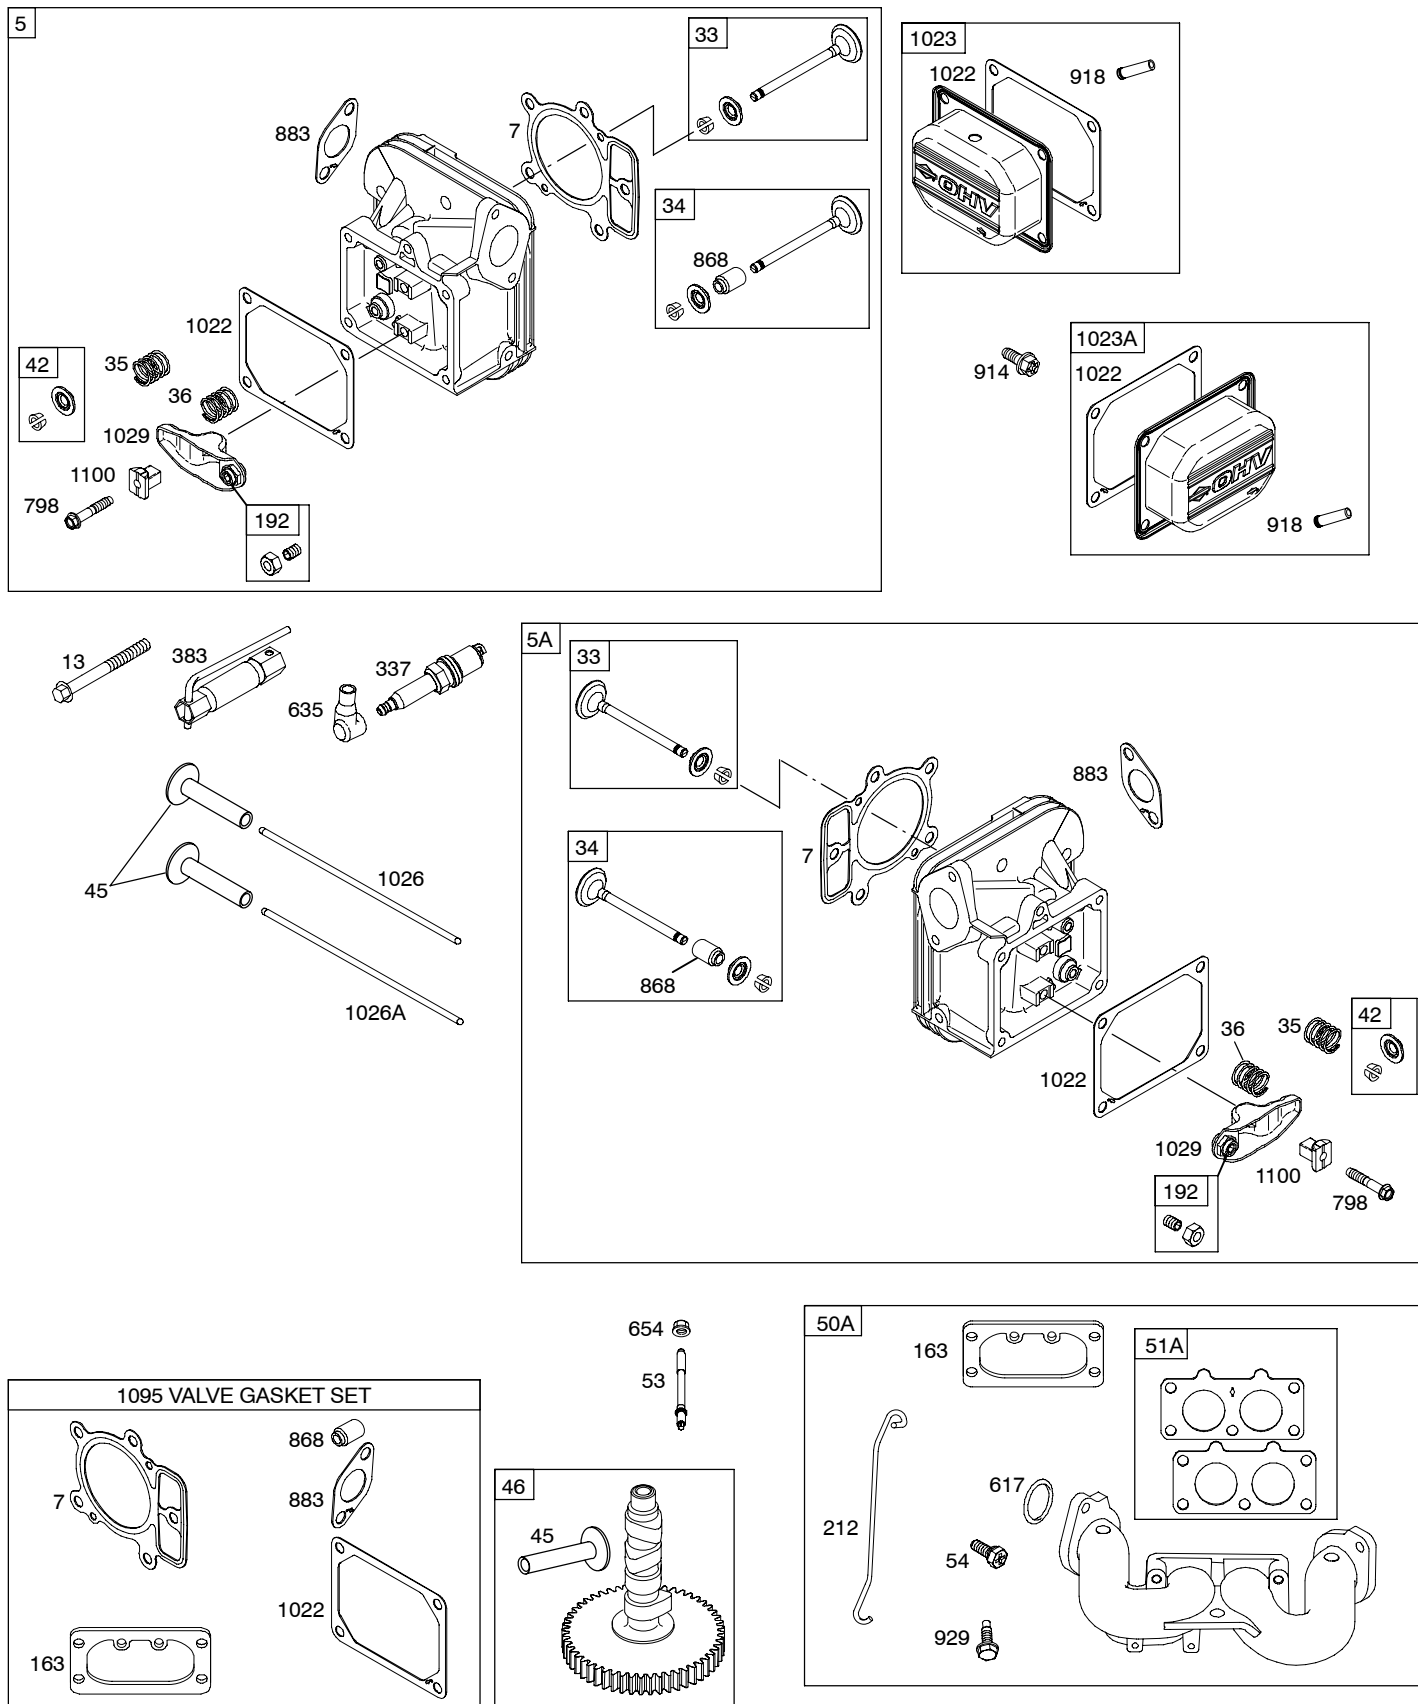


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.


5193-4


Assemblies include all parts shown in frames.

05/17/2007

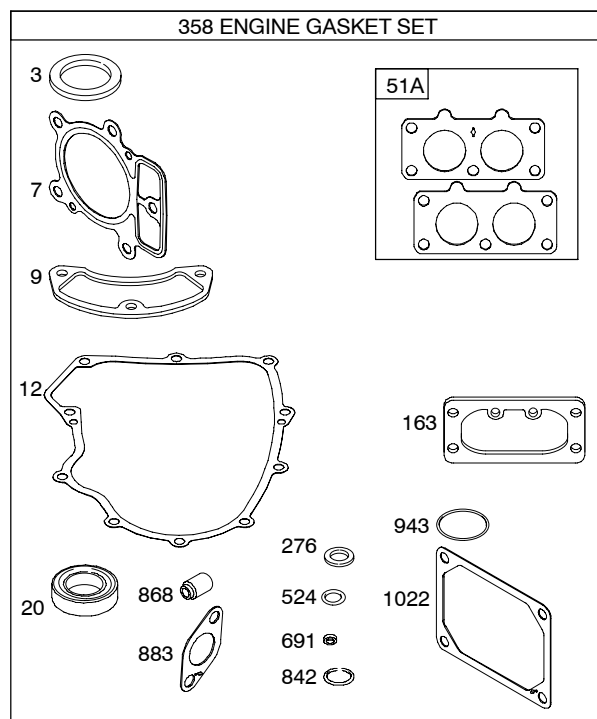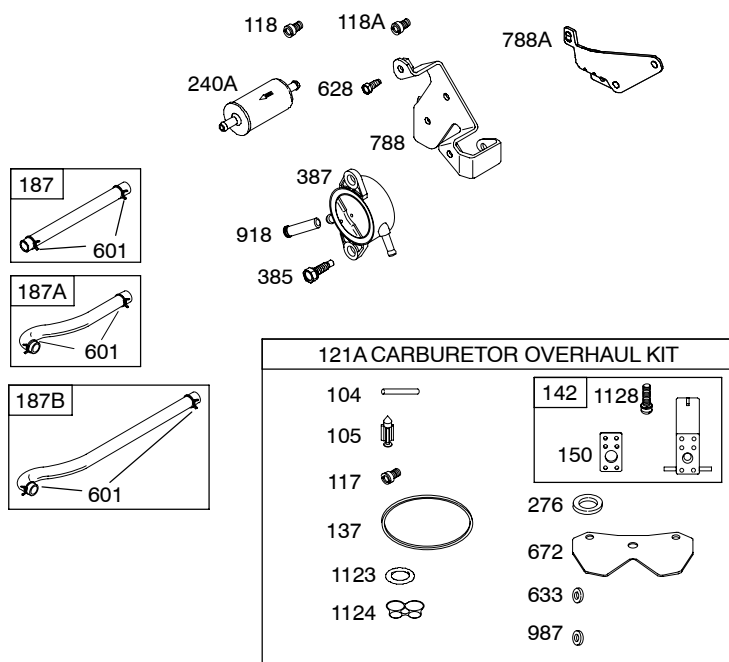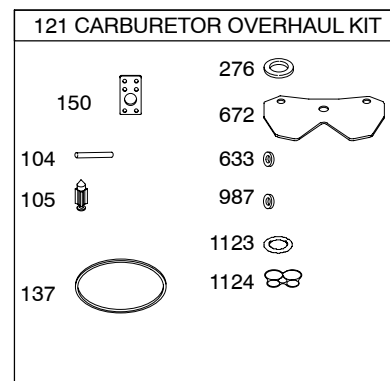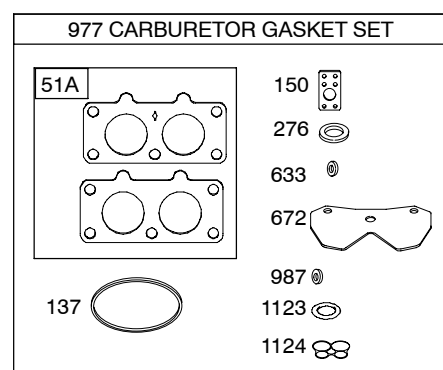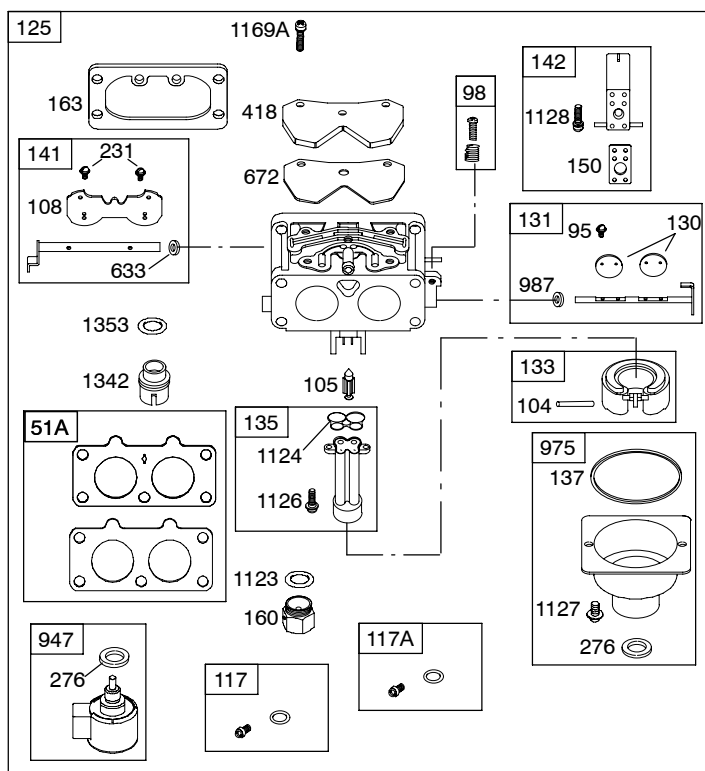

40G700

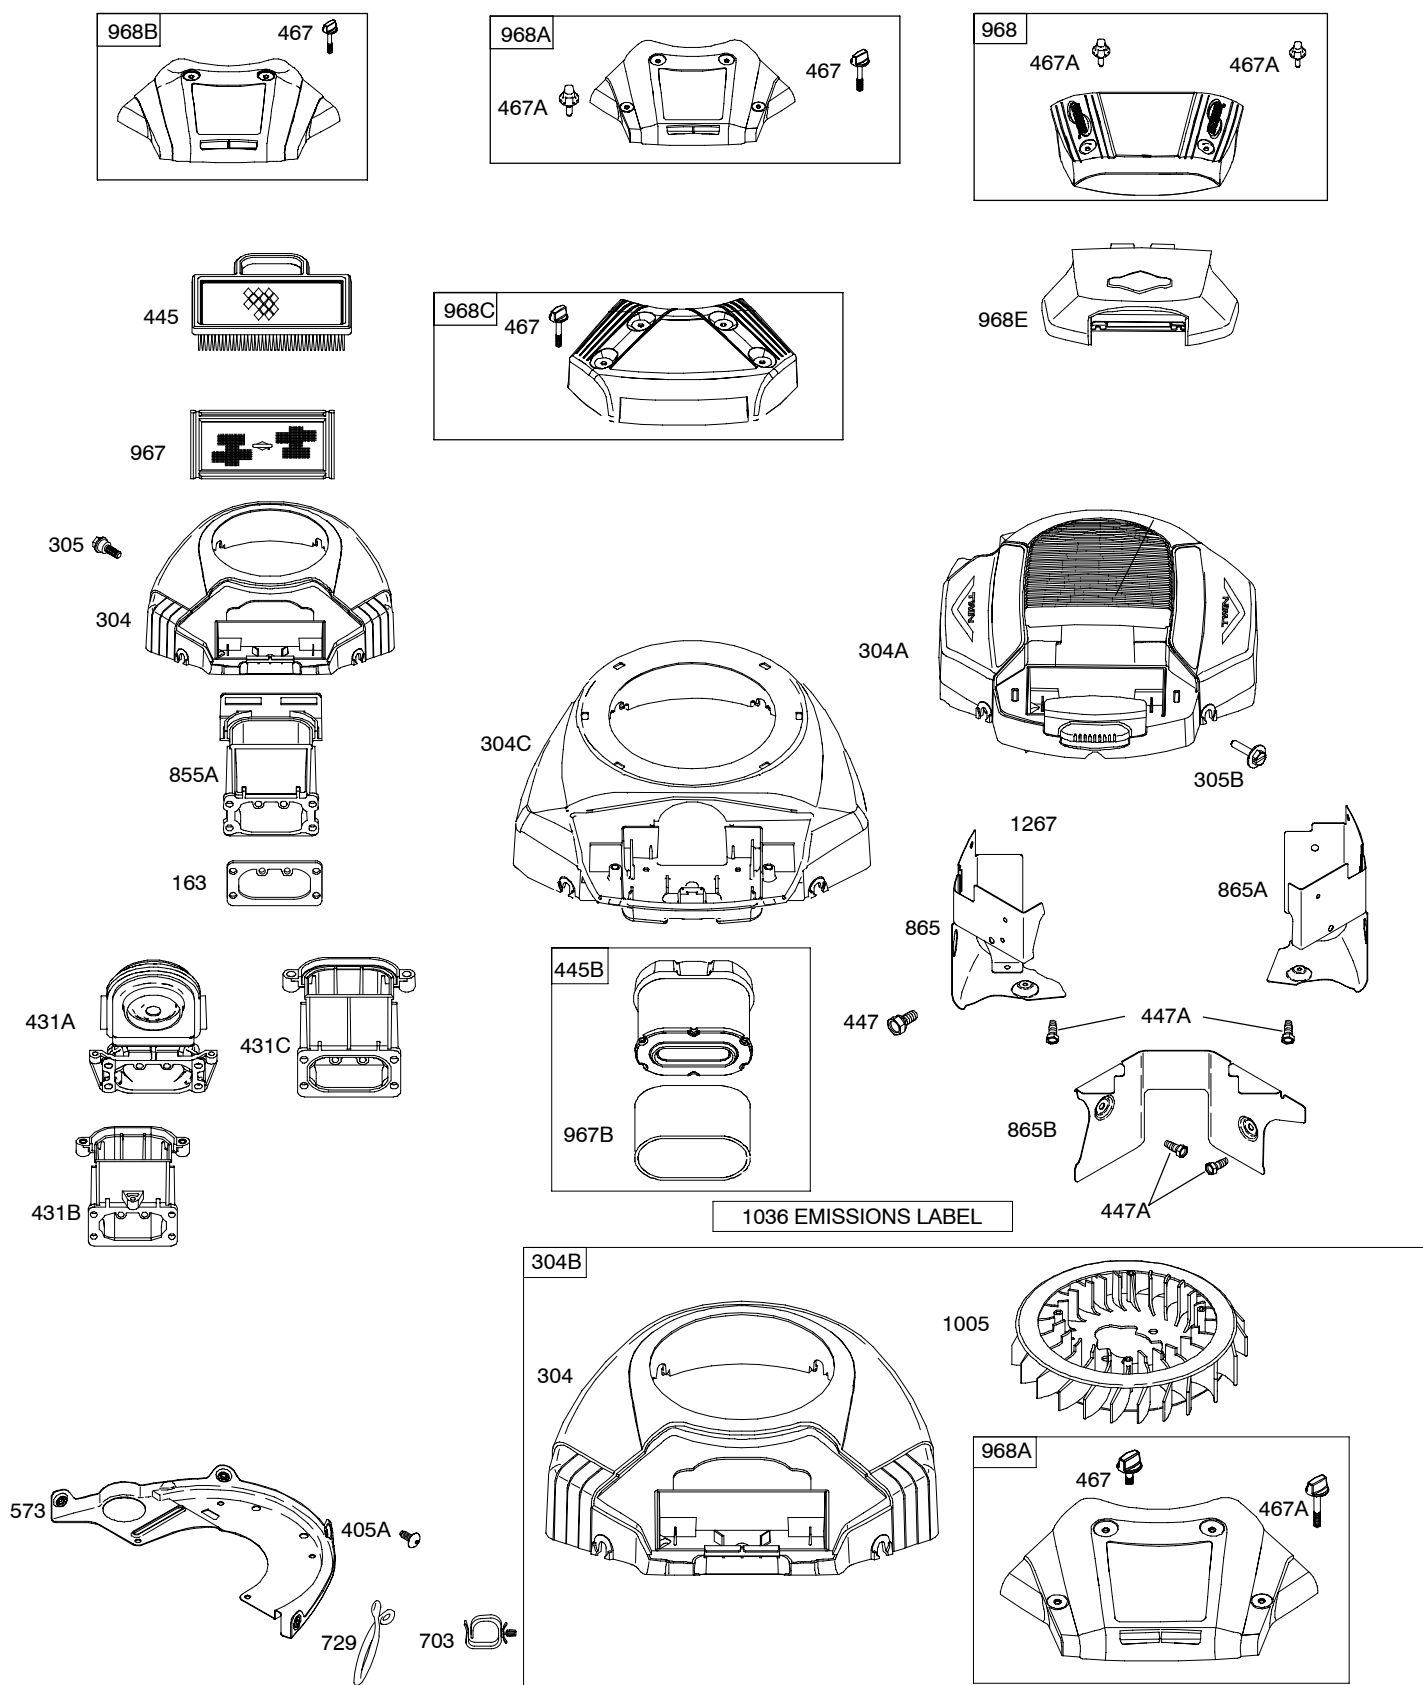

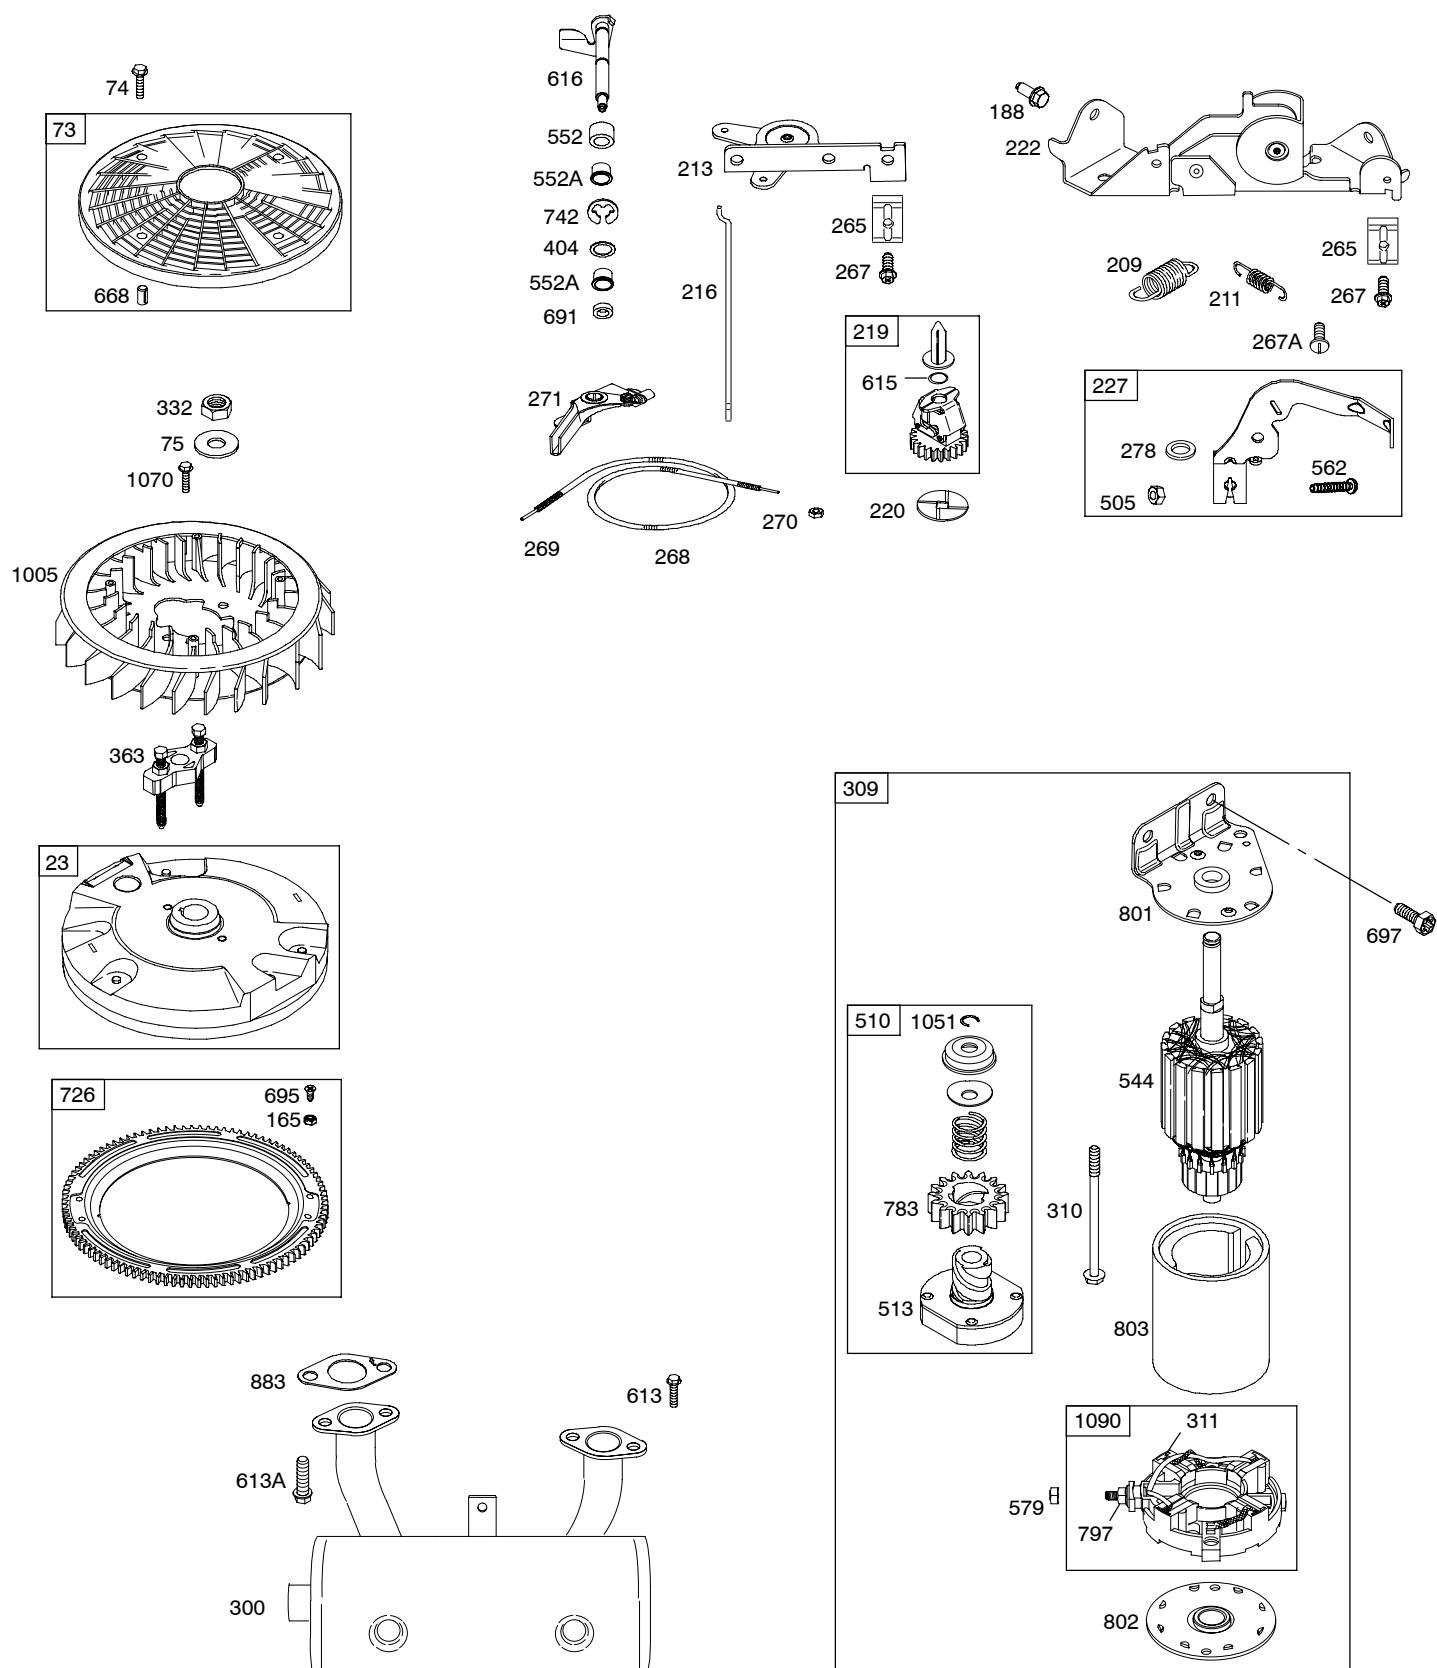









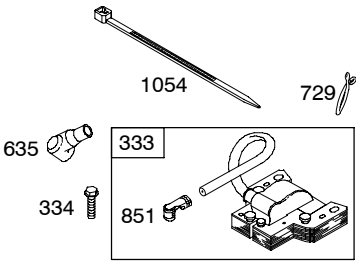
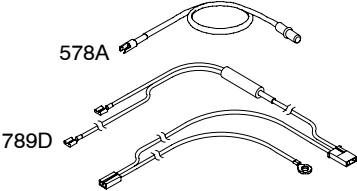
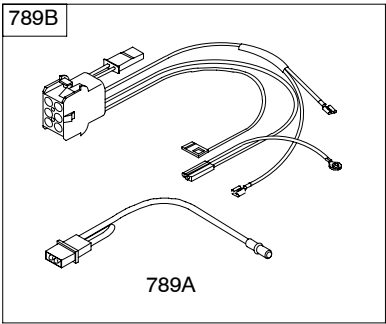
Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5193-7

Assemblies include all parts shown in frames.

05/17/2007

DUAL CIRCUIT		TRI CIRCUIT		10-16 AMP	
474B	1059	474C	1059	474D	1059
					
					
<p>NOTE: All stators use a No. 1119 mounting screw. </p> <p>NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.</p>					



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699751	Cylinder Assembly (Used After Code Date 03082800).	20	★791892	Seal–Oil (PTO Side)	36	694865	Spring–Valve (Exhaust)
1A	699742	Cylinder Assembly (Used Before Code Date 03082900).	22	694966	Screw (Crankcase Cover/Sump)	42	499586	Keeper–Valve
2	499585	Kit–Bushing/Seal (Magneto Side)	23	691053	Flywheel	45	690977	Tappet–Valve
3	★391086S	Seal–Oil (Magneto Side)			----- Note ----- 691054 Flywheel Used on Type No(s). 0100.	46	790562	Camshaft (Used After Code Date 03082800).
4	699747	Sump–Engine (Used After Code Date 03082800).	24	222698S	Key–Flywheel			----- Note ----- 690978 Camshaft (Used Before Code Date 03082900).
		----- Note ----- 690069 Sump–Engine (Used Before Code Date 03082900).	25	793647	Piston Assembly (Standard) (Used After Code Date 06101500).	50A	695241	Manifold–Intake
5	792299	Head–Cylinder (Cylinder 1)			----- Note ----- 698429 Piston Assembly (Standard) (Used Before Code Date 06101600).	51	690950	Gasket–Intake
5A	792300	Head–Cylinder (Cylinder 2)			793648 Piston Assembly (.020" Oversize) (Used After Code Date 06101500).	51A	★791677	Gasket–Intake
7	★Δ693997	Gasket–Cylinder Head			698434 Piston Assembly (.020" Oversize) (Used Before Code Date 06101600).	53	690951	Stud (Carburetor)
8	792185	Breather Assembly				54	699816	Screw (Intake Manifold)
9	★690937	Gasket–Breather				73	494439	Screen–Rotating
10	691108	Screw (Breather Assembly)				74	698425	Screw (Rotating Screen)
11	792184	Tube–Breather				75	691056	Washer (Flywheel)
12	★697227	Gasket–Crankcase				95	690718	Screw (Throttle Valve)
13	791130	Screw (Cylinder Head)				98	699721	Kit–Idle Speed (Used After Code Date 04091400).
15	691680	Plug–Oil Drain (1/2" Square Flush)	26	698430	Ring Set (Standard)			----- Note ----- 499802 Kit–Idle Speed (Used Before Code Date 04091500).
15A	690946	Plug–Oil Drain			----- Note ----- 698437 Ring Set (.020" Oversize)			699721 Kit–Idle Speed Used on Type No(s). 0183, 0184, 0400.
16	699700	Crankshaft (Used After Code Date 04010800).			690975 Lock–Piston Pin	104	●694918	Pin–Float Hinge (Used After Code Date 04091400).
16A	699701	Crankshaft (Includes Connecting Rod) (Used Before Code Date 04010900).	27	690975	Lock–Piston Pin			----- Note ----- ●690984 Pin–Float Hinge (Used Before Code Date 04091500).
			28	690229	Pin–Piston (Standard)			●694918 Pin–Float Hinge Used on Type No(s). 0183, 0184, 0400.
			29	699699	Rod–Connecting (Standard) (Used After Code Date 04010800).			
					----- Note ----- (For Replacement Connecting Rod, See Reference 16A) (Used Before Code Date 04010900).			
			32	690976	Screw (Connecting Rod)			
			33	697576	Valve–Exhaust			
			34	792200	Valve–Intake			
			35	694865	Spring–Valve (Intake)			

★ Included in Engine Gasket Set–Ref. No. 358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

Δ Included in Valve Gasket Set–Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

40G700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
105	●698537	Valve-Float Needle (Used After Code Date 04091400). ----- Note ----- ●690985 Valve-Float Needle (Used Before Code Date 04091500). ●698537 Valve-Float Needle Used on Type No(s). 0183, 0184, 0400.	117A	791502	Jet-Main (Standard) (Right Or Cylinder 2) (Used After Code Date 04091400). ----- Note ----- 842627 Jet-Main (Standard) Used on Type No(s). 0183, 0184, 0400.	125	699709	Carburetor (Used After Code Date 040901400). ----- Note ----- Carburetor (Used Before Code Date 04091500). (Order Carburetor 699709) 792295 Carburetor Used on Type No(s). 0183, 0184, 0400.
108	690986	Valve-Choke ----- Note ----- 699723 Valve-Choke Used on Type No(s). 0183, 0184, 0400.	118	695415	Jet-Main (High Altitude) (Left or Cylinder 1) (Used After Code Date 04091400). ----- Note ----- 699457 Jet-Main (High Altitude) (Left or Cylinder 1) Used on Type No(s). 0183, 0184, 0400.	130	690993	Valve-Throttle
117	●791501	Jet-Main (Standard) (Left or Cylinder 1) (Used After Code Date 04091400). ----- Note ----- ●690232 Jet-Main (Standard) (Used Before Code Date 04091500). 792296 Jet-Main (Standard) Used on Type No(s). 0183, 0184, 0400.	118A	843099	Jet-Main (High Altitude) (Right Or Cylinder 2) (Used After Code Date 04091400). ----- Note ----- 699733 Jet-Main (High Altitude) (Right or Cylinder 2) Used on Type No(s). 0183, 0184, 0400.	131	499805	Kit-Throttle Shaft ----- Note ----- 699722 Kit-Throttle Shaft Used on Type No(s). 0183, 0184, 0400.
			121	792455	Kit-Carburetor Overhaul (Used After Code Date 04091400).	133	699724	Float-Carburetor (Used After Code Date 04091400). ----- Note ----- 499806 Float-Carburetor (Used Before Code Date 04091500). 699724 Float-Carburetor Used on Type No(s). 0183, 0184, 0400.
			121A	499811	Kit-Carburetor Overhaul (Used Before Code Date 04091500).	135	699729	Tube-Fuel Transfer (Used After Code Date 04091400). ----- Note ----- 499803 Tube-Fuel Transfer (Used Before Code Date 04091500). 699729 Tube-Fuel Transfer Used on Type No(s). 0183, 0184, 0400.

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
137	◆690994	Gasket-Float Bowl	160	699727	Retainer-Solenoid (Used After Code Date 04091400). ----- Note ----- 690996 Retainer-Solenoid (Used Before Code Date 04091500).	209	697674	Spring-Governor (Brown) ----- Note ----- 793340 Spring-Governor (Orange) Used on Type No(s). 0183, 0400. 793341 Spring-Governor (Silver) Used on Type No(s). 0184. 698071 Spring-Governor (White) Used on Type No(s). 0100, 0116. 692909 Spring-Governor (Yellow) Used on Type No(s). 0111.
141	699722	Kit-Choke Shaft (Used After Code Date 04091400). ----- Note ----- 499807 Kit-Choke Shaft (Used Before Code Date 04091500). 699722 Kit-Choke Shaft Used on Type No(s). 0183, 0184, 0400.	163	★△691001	Gasket-Air Cleaner	211	691019	Spring-Governed Idle
142	◆699726	Nozzle-Carburetor (Standard) (Used After Code Date 04091400). ----- Note ----- 499808 Nozzle-Carburetor (Standard) (Used Before Code Date 04091500). 699726 Nozzle-Carburetor Used on Type No(s). 0183, 0184, 0400.	165	693148	Nut (Ring Gear)	212	695238	Link-Throttle (Used With Plastic Intake Manifold)
146	690979	Key-Timing	187	791666	Line-Fuel (Cut To Required Length) ----- Note ----- 791745 Line-Fuel (Cut To Required Length) Used on Type No(s). 0114.	213	691021	Bracket-Choke Control
150	◆690995	Gasket-Nozzle	187A	791744	Line-Fuel (Molded)	216	691022	Link-Choke
			187B	791881	Line-Fuel (Molded) (Used After Code Date 05063000). ----- Note ----- 698742 Line-Fuel (Molded) (Used Before Code Date 05070100).	219	793338	Gear-Governor (Used After Code Date 06081400). ----- Note ----- 698231 Gear-Governor (Used Before Code Date 06081500).
			188	691108	Screw (Control Bracket)			
			192	690083	Adjuster-Rocker Arm			

★ Included in Engine Gasket Set-Ref. No. 358.

◆ Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

40G700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
220	690412	Washer (Governor Gear)	268	691025	Casing–Control Wire	304	790688	Housing–Blower (Black)
222	698761	Bracket–Control	269	691026	Wire–Control (Cut To Required Length)			(Used After Code Date 04080300).
227	691048	Lever–Governor Control	270	691027	Nut (Control Wire Casing)	304A	698073	Housing–Blower (Black)
231	690718	Screw (Choke Valve)	271	691028	Lever–Control			Used on Type No(s). 0115, 0116, 0181, 0383.
239	792028	Switch–Oil Pressure	276★♦	690997	Washer–Sealing	304B	790692	Housing–Blower (Used Before Code Date 04080400).
		----- Note -----			----- Note -----	304C	792301	Housing–Blower Used on Type No(s). 0183, 0184, 0400.
		697049 Switch–Oil Pressure Used on Type No(s). 0116.			695410 Washer–Sealing Used on Type No(s). 0183, 0184, 0400.	305	691005	Screw (Blower Housing)
240A	695666	Filter–Fuel	278	792651	Washer (Governor Control Lever)	305B	790690	Screw (Blower Housing)
250	690957	Retainer–Breather	287	691108	Screw (Dipstick Tube)	309	499521	Motor–Starter
252	794389	Collector–Oil	300	696226	Muffler Used on Type No(s). 0110.	310	691263	Screw (Starter Motor)
265	691024	Clamp–Casing				311	497608	Brush Set
267	691044	Screw (Casing Clamp) Used on Type No(s). 0100, 0110, 0111, 0112, 0114, 0116, 0183, 0184, 0400.				332	691059	Nut (Flywheel)
267A	695134	Screw (Casing Clamp) Used on Type No(s). 0115, 0181.				333	691060	Armature–Magnet
						334	691061	Screw (Magnet Armature)

★ Included in Engine Gasket Set–Ref. No. 358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

♦ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
337	491055S	Plug–Spark ----- Note ----- 793541 Plug–Spark Used on Type No(s). 0184.	404	690442	Washer (Governor Crank)	474B	696459	Alternator (Dual Circuit) Used on Type No(s). 0100.
358	694012	Gasket Set–Engine	405A	697820	Screw (Back Plate)	474C	696457	Alternator (Tri Circuit) Used on Type No(s). 0184, 0383, 0400.
363	19203	Puller–Flywheel	415	690283	Plug (Sump)	474D	696458	Alternator (10–16 Amp Regulated)
383	19374S	Wrench–Spark Plug	418	690999	Plate–Carburetor	501	691185	Regulator (10–16 Amp Regulated)
385	691108	Screw (Fuel Pump)	431A	792297	Elbow–Intake Used on Type No(s). 0183, 0184, 0400.	501A	691188	Regulator (Tri Circuit) Used on Type No(s). 0184, 0383, 0400.
387	808656	Pump–Fuel	431B	790816	Elbow–Intake (Used After Code Date 04080300).	505	691029	Nut (Governor Control Lever)
			431C	691011	Elbow–Intake (Used Before Code Date 04080400).			
			445	698754	Filter–Air Cleaner Cartridge ----- Note ----- 499486S Filter–Air Cleaner Cartridge Used on Type No(s). 0112, 0114.			
			445B	792105	Filter–Air Cleaner Cartridge Used on Type No(s). 0183, 0184, 0400.			
			447	691003	Screw (Air Guide Cover)			
			447A	691108	Screw (Air Guide Cover)			
			467	691008	Knob–Air Cleaner			
			467A	790697	Knob–Air Cleaner (1 1/2" Long)			

★ Included in Engine Gasket Set–Ref. No. 358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

40G700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
510	696541	Drive-Starter	695	693149	Screw (Ring Gear)	877C	393537	Wire/Connector- Alternator
513	692024	Clutch-Drive	697	690372	Screw (Drive Cap)			(Tri Circuit)
523	691036	Dipstick	703	691010	Clip			Used on Type No(s).
524	★691032	Seal-Dipstick Tube	718	690959	Pin-Locating	877D	399916	Wire/Connector- Alternator
525	691037	Tube-Dipstick	726	499612	Gear-Ring			(10-16 Amp
526	691108	Screw (Regulator)	729	694123	Clip-Wire			Regulated)
		(10-16 Amp	741	690980	Gear-Timing	878C	398661	Harness-Alternator
526A	691129	Screw (Regulator)	742	690328	Retainer-E Ring			(Dual Circuit)
		Used on Type No(s).	750	696999	Screw (Oil Pump Cover)	883	★Δ690970	Gasket-Exhaust
		0184, 0383, 0400.	783	695708	Gear-Pinion	914	691127	Screw (Rocker Cover)
544		Armature-Starter (Service With 499521	788	691039	Bracket-Fuel Pump (Used Before Code Date 06072800).	918	793147	Hose-Vacuum (Used After Code Date 06072700).
552	690552	Bushing-Governor Crank	788A	793145	Bracket-Fuel Pump (Used After Code Date 06072700).			----- Note -----
552A	690553	Bushing-Governor Crank	789A	790544	Harness-Wiring			694000 Hose-Vacuum (Used Before Code Date 06072800).
562	690311	Bolt (Governor Control Lever)	789B	698330	Harness-Wiring	929	695239	Screw (Choke Control Bracket)
			789D	691220	Harness-Wiring	943	★690589	Seal-O Ring (Oil Pump Cover)
573	790444	Plate-Back	797	693167	Nut (Brush Retainer)	947	699728	Solenoid-Fuel (Used After Code Date 04091400).
578A	691208	Wire Assembly	798	697890	Screw (Rocker Arm)			----- Note -----
579	691029	Nut (Starter Cable)	801	691283	Cap-Drive			499809 Solenoid-Fuel (Used Before Code Date 04091500).
601A	691038	Clamp-Hose (Black)	802	691286	Cap-End			841546 Solenoid-Fuel Used on Type No(s).
613	690341	Screw (Muffler)	803		Housing-Starter (Service With 499521	965	499613	Cover-Oil Pump
613B	690297	Screw (Muffler)	842	★691031	Seal-O Ring (Dipstick Tube)	967	273638S	Filter-Pre Cleaner
615	698290	Retainer-Governor Shaft	847	499602	Dipstick/Tube Assembly	967B	792303	Filter-Pre Cleaner Used on Type No(s).
616	691045	Crank-Governor	851	493880S	Terminal-Spark Plug			0183, 0184, 0400.
617	697891	Seal-O Ring (Intake Manifold)	855A	698072	Adapter-Air Cleaner Used on Type No(s).			0115, 0116, 0181, 0383.
628	691108	Screw (Fuel Pump Bracket)				865	691012	Cover-Air Guide (Cylinder 1)
		(Used Before Code Date 06072800).				865A	793205	Cover-Air Guide (Cylinder 2)
633	◆690998	Seal-Choke/Throttle Shaft				865B	691015	Cover-Air Guide (Valley)
635	66538S	Boot-Spark Plug						----- Note -----
654	690958	Nut (Carburetor)						792286 Cover-Air Guide (Valley)
668	691215	Spacer						Used on Type No(s).
672	◆690234	Gasket-Carburetor Plate						0183, 0184, 0400.
691	★790574	Seal-Governor Shaft						
			868	★Δ690968	Seal-Valve			
			877B	393456	Wire/Connector- Alternator (Dual Circuit)			

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5193-14

Assemblies include all parts shown in frames.

05/17/2007

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
968A	790689	Cover-Air Cleaner (Used Before Code Date 06103000 and After Code Date 04080300).	1023A	793146	Cover-Rocker (Cylinder 2) (Used After Code Date 06072700). ----- Note -----	1123	●699725	Seal-O Ring (Solenoid Retainer) (Used After Code Date 04091400). ----- Note -----
968B	790095	Cover-Air Cleaner (Used Before Code Date 04080400).		499600	Cover-Rocker (Cylinder 2) (Used Before Code Date 06072800).		●690987	Seal-O Ring (Solenoid Retainer) (Used Before Code Date 04091500).
968C	791242	Cover-Air Cleaner (Used After Code Date 06102900).	1024	499054	Pump-Oil (Used Before Code Date 07022600).		●841653	Seal-O Ring (Solenoid Retainer) Used on Type No(s). 0183, 0184, 0400.
968E	790096	Cover-Air Cleaner Used on Type No(s). 0115, 0116, 0181, 0383.	1024A	794416	Pump-Oil (Used After Code Date 07022500).	1124	●690988	Seal-O Ring (Fuel Transfer Tube)
975	499810	Bowl-Float ----- Note ----- 791232 Bowl-Float Used on Type No(s). 0183, 0184, 0400.	1026	690981	Rod-Push (Steel)	1126	690991	Screw (Fuel Transfer Tube)
977	499812	Gasket Set-Carburetor (Used Before Code Date 04091500).	1026A	690982	Rod-Push (Aluminum)	1127	690992	Screw (Float Bowl) ----- Note -----
987	●691000	Seal-Throttle Shaft	1027A	696854	Filter-Oil		695407	Screw (Float Bowl) Used on Type No(s). 0183, 0184, 0400.
1005	790698	Fan-Flywheel (Used After Code Date 04080300). ----- Note ----- 499603 Fan-Flywheel (Used Before Code Date 04080400). 698760 Fan-Flywheel Used on Type No(s). 0115, 0116, 0181, 0383. 791236 Fan-Flywheel Used on Type No(s). 0183, 0184, 0400.	1029	690972	Arm-Rocker	1128	●690990	Screw (Carburetor Nozzle)
			1035	691042	Shaft-Pump (Used Before Code Date 07022600). Label-Emissions (Available from a Briggs & Stratton authorized Service Dealer)	1169A	693140	Screw (Carburetor Cover Plate)
			1036			1267	698440	Latch-Blower Housing Used on Type No(s). 0115, 0116, 0181, 0383.
			1040	791237	Plate-Trim	1319	794467	Label-Warning
			1051	691265	Ring-Retaining	1330	273521	Repair Manual
			1054	280275	Tie-Cable	1342	699731	Extension-Fuel Transfer Tube
			1058	277103	Operator's Manual	1353	699725	Seal-O Ring (Fuel Transfer Tube Extension)
			1059	698516	Kit-Screw/Washer			
			1070	690372	Screw (Flywheel Fan)			
1013	690954	Nipple-Oil Filter	1090	691293	Retainer-Brush			
1017	690770	Screen-Oil Pump	1095	694013	Gasket Set-Valve			
1022	★690971	Gasket-Rocker Cover	1100	690973	Pivot-Rocker Arm			
1023	499599	Cover-Rocker (Cylinder 1)	1119	691183	Screw (Alternator)			

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.